

GEARED – HEAD LATHE

Operation Instruction

Max. SWING OVER BED 13" (330mm)

Max. DISTANCE BETWEEN CENTERS 40" (1016mm)

110-1351

CAUTION

1. WHEN UNPACKING, LATHE ACCESSORIES SHOULD CORRESPOND TO THE ITEM OF PACKING LIST. IF NOT, PLEASE MAKE CONTACT WITH YOUR DEALER.
2. NEVER USING THE MACHINE WITHOUT FIRST READING THE OPERATING INSTRUCTION AND UNDERSTANDING IT'S REQUIREMENTS OF INSTALLING, OPERATING AND ADJUSTING ETC.
3. IF THE MACHINE OPERATING IS NOT ABLE TO BE SATISFIED IN USUAL OPERATING, MAINTENANCE AND WITHIN THE FIXED TIME, PLEASE MAKE CONTACT WITH YOUR DEALER.

CONTENTS

OUTSIDE DIAGRAM.....	1
APPLICATION.....	2
MAIN TECHNICAL SPECIFICATION	2
HOISTING AND INSTALLATION.....	3
LATHE DRIVING SYSTEM DIAGRAM AND THE LIST OF MAIN GEARS, SCREWS, AND NUTS	6
BEARING LIST	10
LUBRICATION.....	12
ELECTRICAL DOCUMENT CATALOGUE	14
TRIAL DRIVE, ADJUSTMENT AND OPERATION.....	25
MAINTENANCE.....	32
DAMAGEABLE PARTS	33

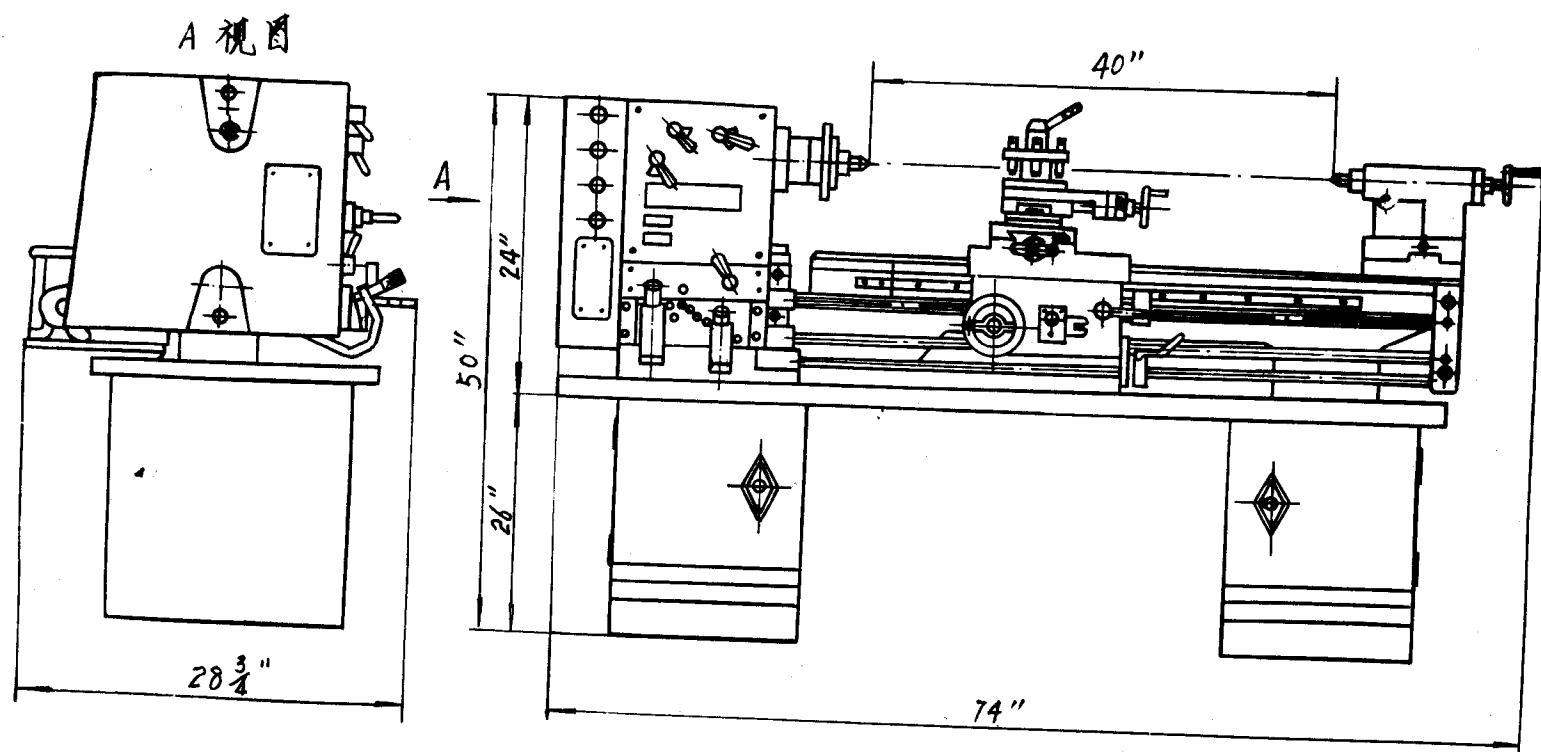


Fig.1 Outside Diagram

APPLICATION

The machine is a small-scale universal engine lathe. It can perform various turning operation, as well as boring, drilling, grooving and other operations. It can also be used for turning metric threads and inch threads.

The machine is characterized by simple construction, easy operation, large hole in spindle and small floor space. It is used in the instrument industry and repairing workshops and is suitable for metal manufacture in single piece, small and medium batch production.

MAIN TECHNICAL SPECIFICATION

1. Main Specification

Max. swing dia. of workpiece over bed.....12"(300mm)
Max. swing dia. of workpiece over saddle gap17"(430mm)
Max. swing over cross slide..... 7"(178mm)
Max. length of workpiece36"(900mm)

2. Headstock

(dia. of) spindle bore..... $1\frac{1}{2}$ "(38mm)

Taper of spindle bore.....M. T. No. 5

Range of spindle speeds (9 or 18 changes).....50-1500r. p. m.

3. Change Gears And Gear Box

Threads which can be cut Metric: 29 kinds, 0.2-4.5mm

Inch: 40 kinds, 4-112T. P. I.

Saddle feed range per spindle revolution:

40 kinds, 0.028-0.791mm/rev.

Cross feed range per spindle revolution:

40 kinds, 0.010-0.268mm/rev.

Threads per inch lead screw 8T. P. I.

Threads per inch cross screw 8T. P. I.

Cross feed per division on its dial 0.001"(0.025mm)

Threads per inch tool post screw 8T. P. I.

Tool Post feed per division on its dial 0.001"(0.03mm)

4. Tool Post And Saddle

Max. turn angle of tool post $\pm 90^\circ$

Tool slide travel 3"(76mm)

Cross slide travel	$5\frac{1}{8}"$ (130mm)
Saddle travel	36"(914mm)
5. Tailstock	
Dia. of tailstock quill	$1\frac{1}{4}"$ (32mm)
Taper of tailstock quill bore	M. T. No. 3
Max. travel of tailstock quill	4"(100mm)
6. Motor	
Motor frequency	60 Hz or 50 Hz
Motor horse power	1.5 HP(1.1KW)
Motor rotational speed	1720 R. P. M. or 1420R. P. M.
Motor voltage	220V/380V 3 phase or 110V/220V 1 phase
7. Lathe size and weight	
Overall dimensions(L × W × H)	
$74" \times 28\frac{3}{4}" \times 24"$ (1880 × 730 × 610mm)	
[With Stands: $74" \times 28\frac{3}{4}" \times 50"$ (1880 × 730 × 1270mm)]	
N · W/G · W	460/560 kg 1014/1235 lb.
[N · W/G · W	540/640 kg] 1190/1411 lb.

HOISTING AND INSTALLATION

1. After unpacking, count the lathe accessories according to packing list.
2. Remove the paper which covered the unpainted surfaces and using a nonvolatile solvent and brush, thoroughly clean grease which covered surfaces.
3. Sling the machine as shown in the hoisting chart Fig. 2 when it is transporting.
4. The fixed dimension of this machine are shown in the Fig. 3. The machine should be firmly attached to the floor by lathe stands. If you purchases a bench lathe, place the chip tray on top of the bench; mark off the location of the bed mounting holes using a pencil. Then drill the six bolt holes.
5. To maintain accuracy, it is important to keep the bed way leveled. Please use the following procedure: Move the carriage to the headstock end of the bed-way. Place the level in a 90 degree position on top of the cross slide. Loosen the mounting bolts and jack up the base stand(or bed)with adjusting washer to center the bubble in the level. Retighten the mounting bolts. Move the carriage to tailstock end of the bed way and repeat that procedure. After doing that please recheck the headstock end and continue the procedure until both ends of the


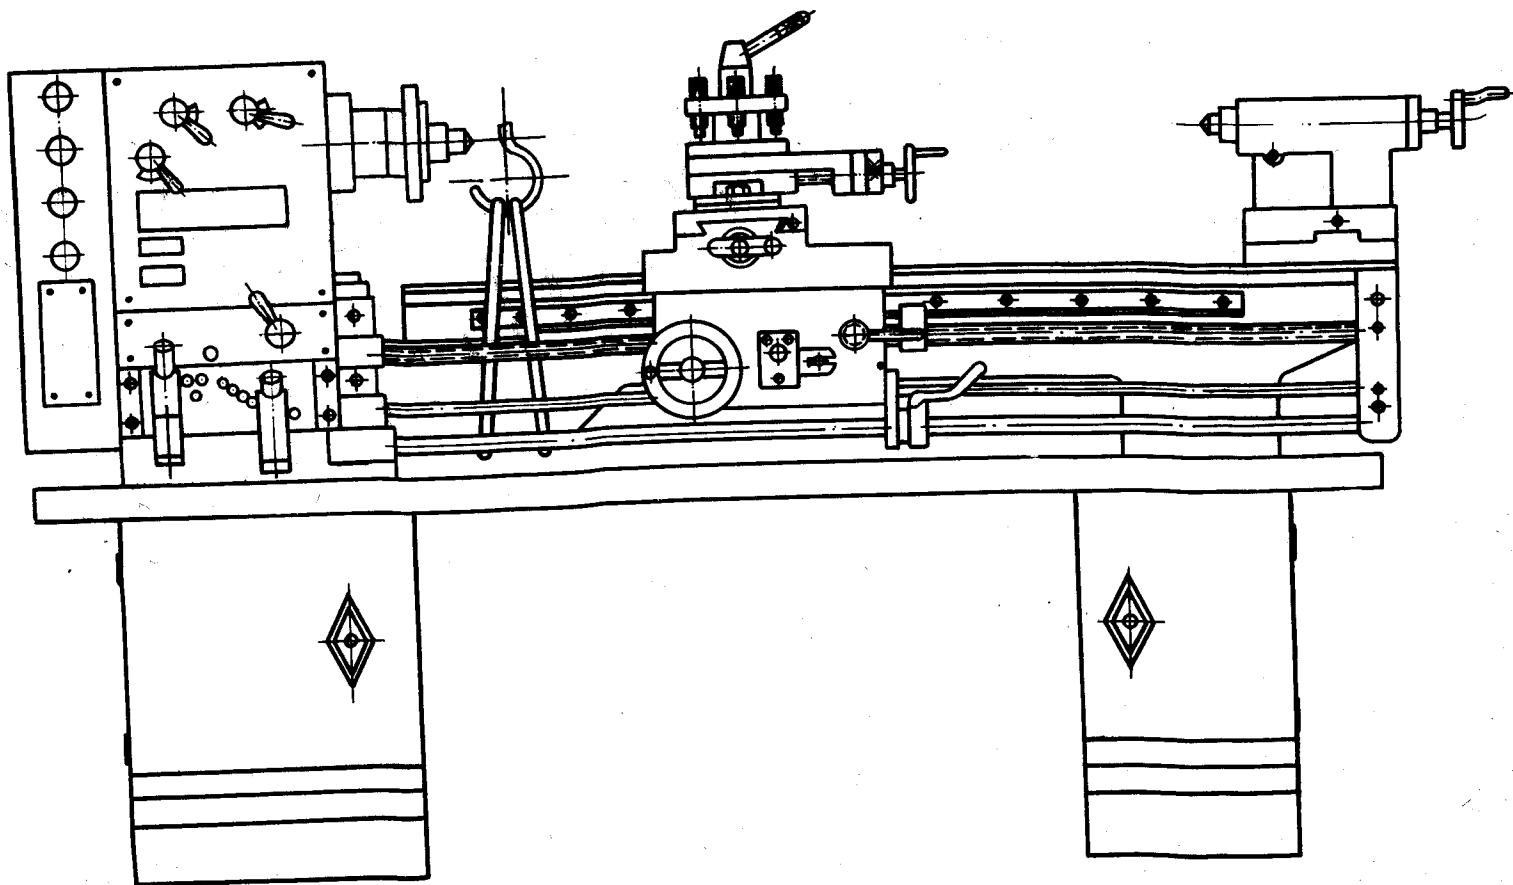


Fig. 2 Hoisting Chart

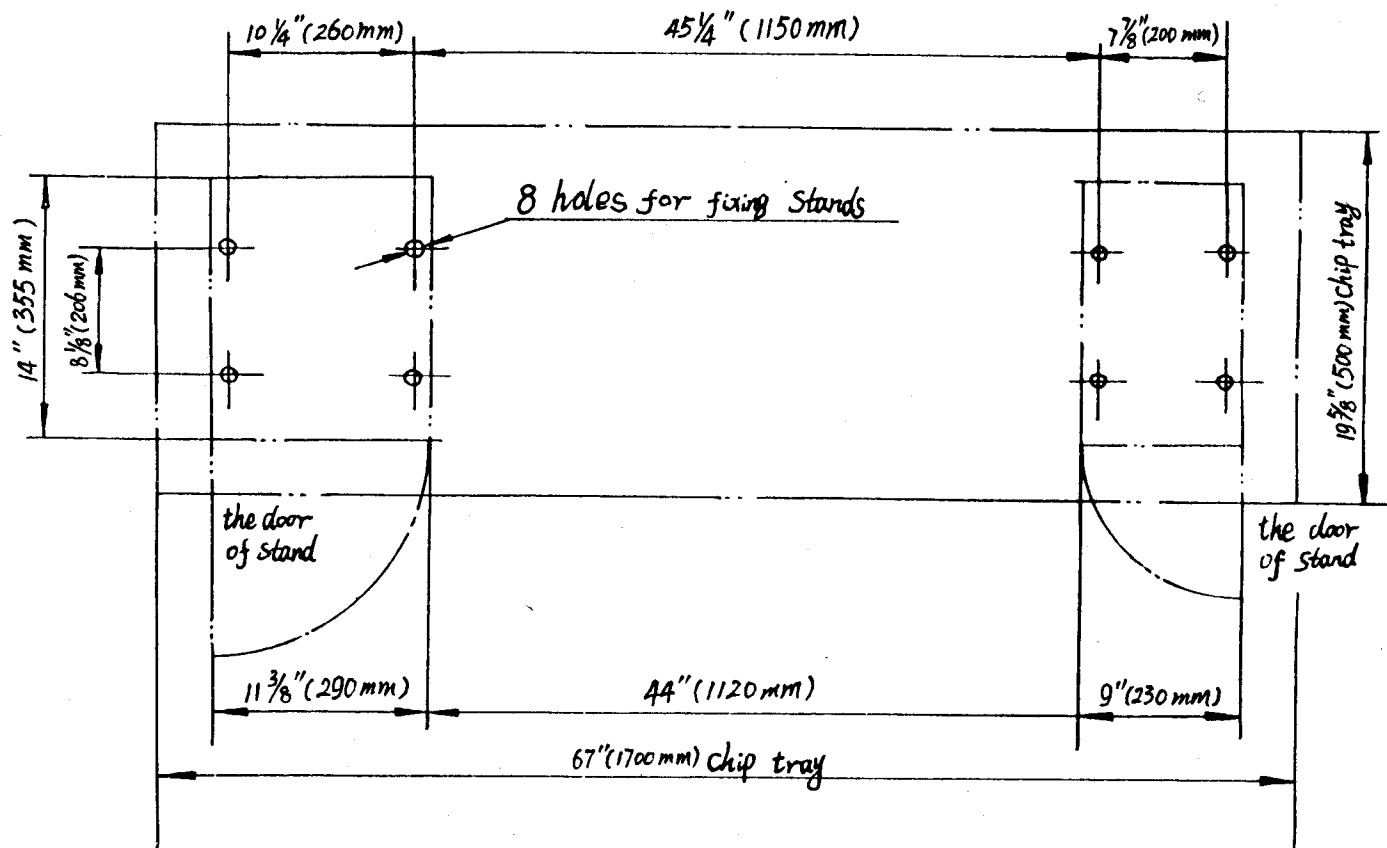

bedway are level (the longitudinal tolerance is 0.02/1000 and the cross one is 0.04/1000).

6. During transport and unpacking, it is likely that debris will be present on top of the lathe. Do not move the carriage or tailstock until the bed way has been thoroughly cleaned.

LATHE DRIVING SYSTEM AND THE LIST OF MAIN GEARS, SCREWS, NUTS

Machine driving system, see Fig. 4

The list of main gears, screws and nuts in the machine driving system

parts	part No.	descri- ption	No. of gear teeth or sc- rew thread	modulus or pitch	pressure angle	material	notes
head- stock	1	gear	42	m2	20 deg	45	
	2	gear	23	m2	20 deg	45	
	3	gear	51(47)	m2	20 deg	45	47 teeth gear is used to 18 change speed lathe
	4	gear	36	m2	20 deg	45	
	5	gear	55	m2	20 deg	45	
	6	gear	27(31)	m2	20 deg	45	"
	7	gear	50(45)	m2	20 deg	45	"
	8	gear	65(58)	m2	20 deg	45	
	9	gear	21	m2	20 deg	45	
	10	gear	45	m2	20 deg	45	"
	11	gear	54(59)	m2	20 deg	45	"
	12	gear	39(46)	m2	20 deg	45	
	13	gear	83	m2	20 deg	45	
	14	paired	45	m2	20 deg	45	
		gear	40	m2	20 deg	45	
	15	paired	40	m2	20 deg	45	
		gear	45	m2	20 deg	45	

续表



parts	part No.	description	No. of teeth or thread	modulus or pitch	pressure angle	material	notes
gear-box	16	paired gear	32	m1.75	20 deg	45	
			16	m1.75	20 deg	45	
	17	paired gear	32	m1.75	20 deg	45	
			16	m1.75	20 deg	45	
	18	gear	16	m1.75	20 deg	45	
	19	gear	32	m1.75	20 deg	45	
	20	gear	16	m1.75	20 deg	45	
	21	gear	16	m1.75	20 deg	45	
	22	gear	18	m1.75	20 deg	45	
	23	gear	19	m1.75	20 deg	45	
	24	gear	20	m1.75	20 deg	45	
	25	gear	22	m1.75	20 deg	45	
	26	gear	24	m1.75	20 deg	45	
	27	gear	26	m1.75	20 deg	45	
	28	gear	28	m1.75	20 deg	45	
	29	gear	24	m1.75	20 deg	45	
	30	gear	24	m1.75	20 deg	45	
	31	gear	15	m1.75	20 deg	45	
	32	gear	16	m1.75	20 deg	45	
	33	gear	32	m1.75	20 deg	45	
	34	gear	24	m1.75	20 deg	45	
apron	35	gear	11	m2	20 deg	45	
	36	rack		m2	20 deg	45	
	37	lead screw	single thread	8 teeth per inch		45	
	38	half nuts	single thread	8 teeth per inch		ZQSn 6-6-3	

续表

parts	part No.	description	No. of teeth or thread	modulus or pitch	pressure angle	material	notes
apron	39	worm	single thread	m2	20 deg	45	
	40	worm gear	24	m2	20 deg	ZQSn 6-6-3	
	41	gear	12	m2	20 deg	45	
	42	gear	50	m2	20 deg	45	
	43	pinoin	25	m2	20 deg	45	
	44	nut	single thread	8 teeth per inch		ZQSn 6-6-3	lefthand thread
	45	screw	single thread	8 teeth per inch		45	lefthand thread
	46	gear	14	m2	20 deg	45	
	47	gear	51	m2	20 deg	45	
	48	gear	13	m2	20 deg	45	
	49	gear	25	m2	20 deg	45	
	50	gear	48	m2	20 deg	45	
	51	screw	single thread	8 teeth per inch		45	
	52	screw nut	single thread	8 teeth per inch		ZQSn 6-6-3	
tail-stock	53	screw	single thread	10 teeth per inch		45	lefthand thread
	54	nut	single thread	10 teeth per inch		ZQSn 6-6-3	lefthand thread
change gear		gear	40	m1.5	20 deg	45	
		gear	25	m1.5	20 deg	45	
		gear	26	m1.5	20 deg	45	
		gear	43	m1.5	20 deg	45	
		gear	46	m1.5	20 deg	45	
		gear	47	m1.5	20 deg	45	
		gear	60	m1.5	20 deg	45	
		gear	80	m1.5	20 deg	HT200	

Large
Pulley
OUT

1430 R.P.M. (50HZ)
or 1730 R.P.M. (60HZ)

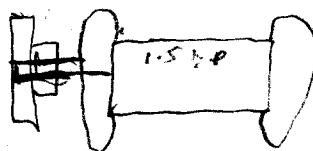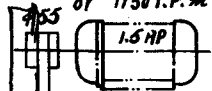

Motor Pulley
Small Diam Closest to Motor


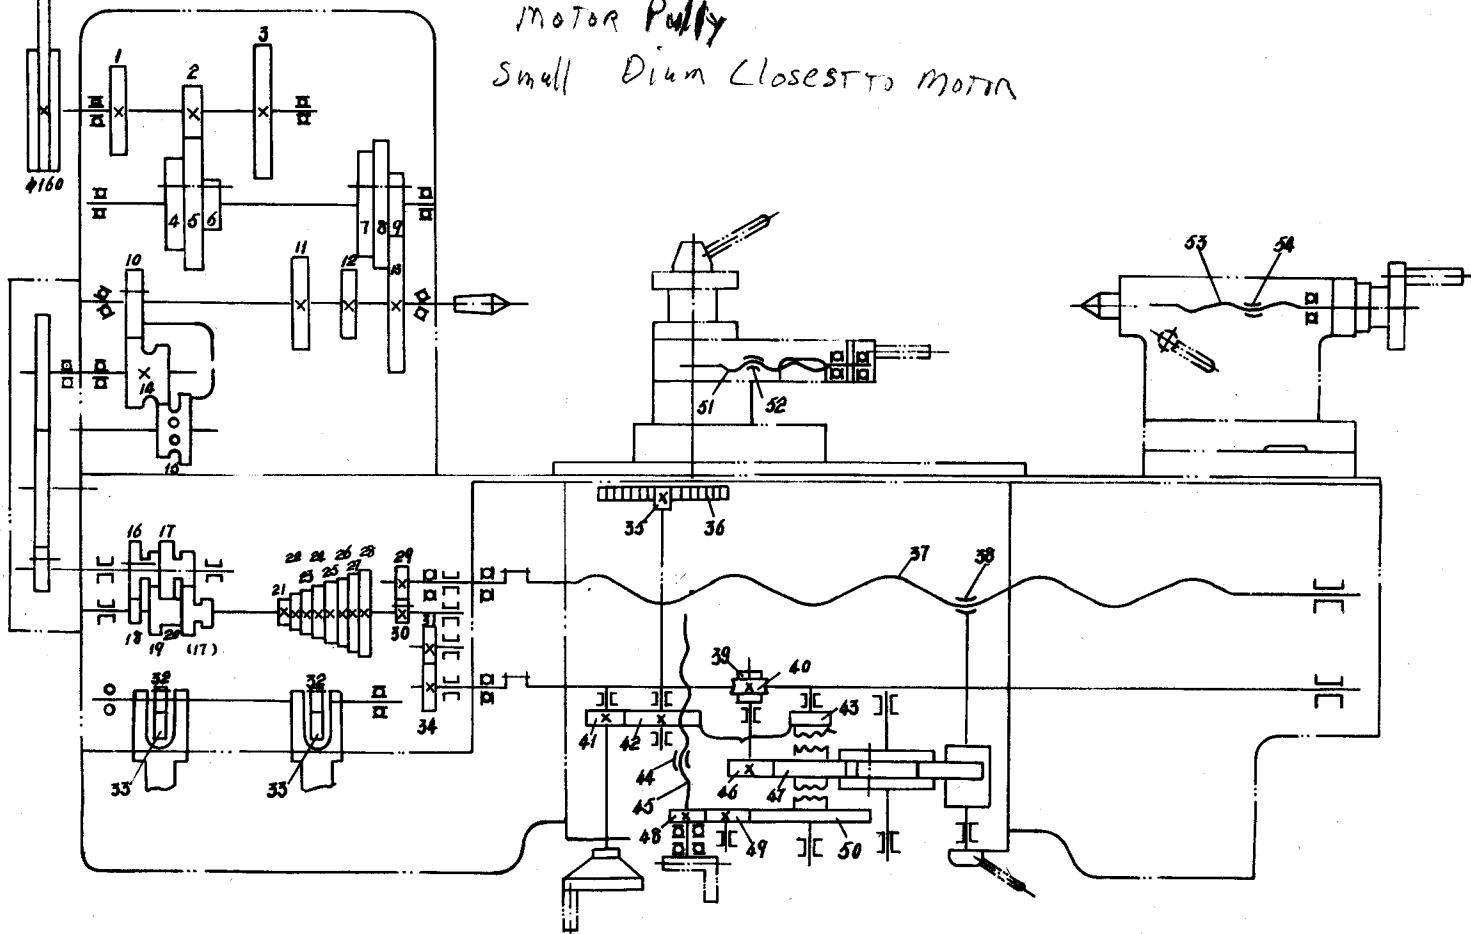


Fig. 4 Driving System

BEARING LIST(See Fig 5)

Type	Name	Specification	Q'TY	Installation
60104	single row ball bearing with shield	$20 \times 42 \times 12$	2	headstock
60304	"	$20 \times 52 \times 15$	1	
104	single row ball bearing	$20 \times 42 \times 12$	3	
204	"	$20 \times 47 \times 14$	1	
D7211	single row taper roller bearing	$55 \times 100 \times 23$	1	
D7212	"	$60 \times 110 \times 24$	1	
7000102	single row ball bearing	$15 \times 32 \times 8$	2	gear box
8103	single row ball thrust bearing	$17 \times 30 \times 9$	3	
8101	"	$12 \times 26 \times 9$	2	carriage
8102	"	$15 \times 28 \times 9$	2	
8101	"	$12 \times 26 \times 9$	1	tailstock
80202	single row ball bearing with two end shield	$15 \times 35 \times 11$	1	change gear

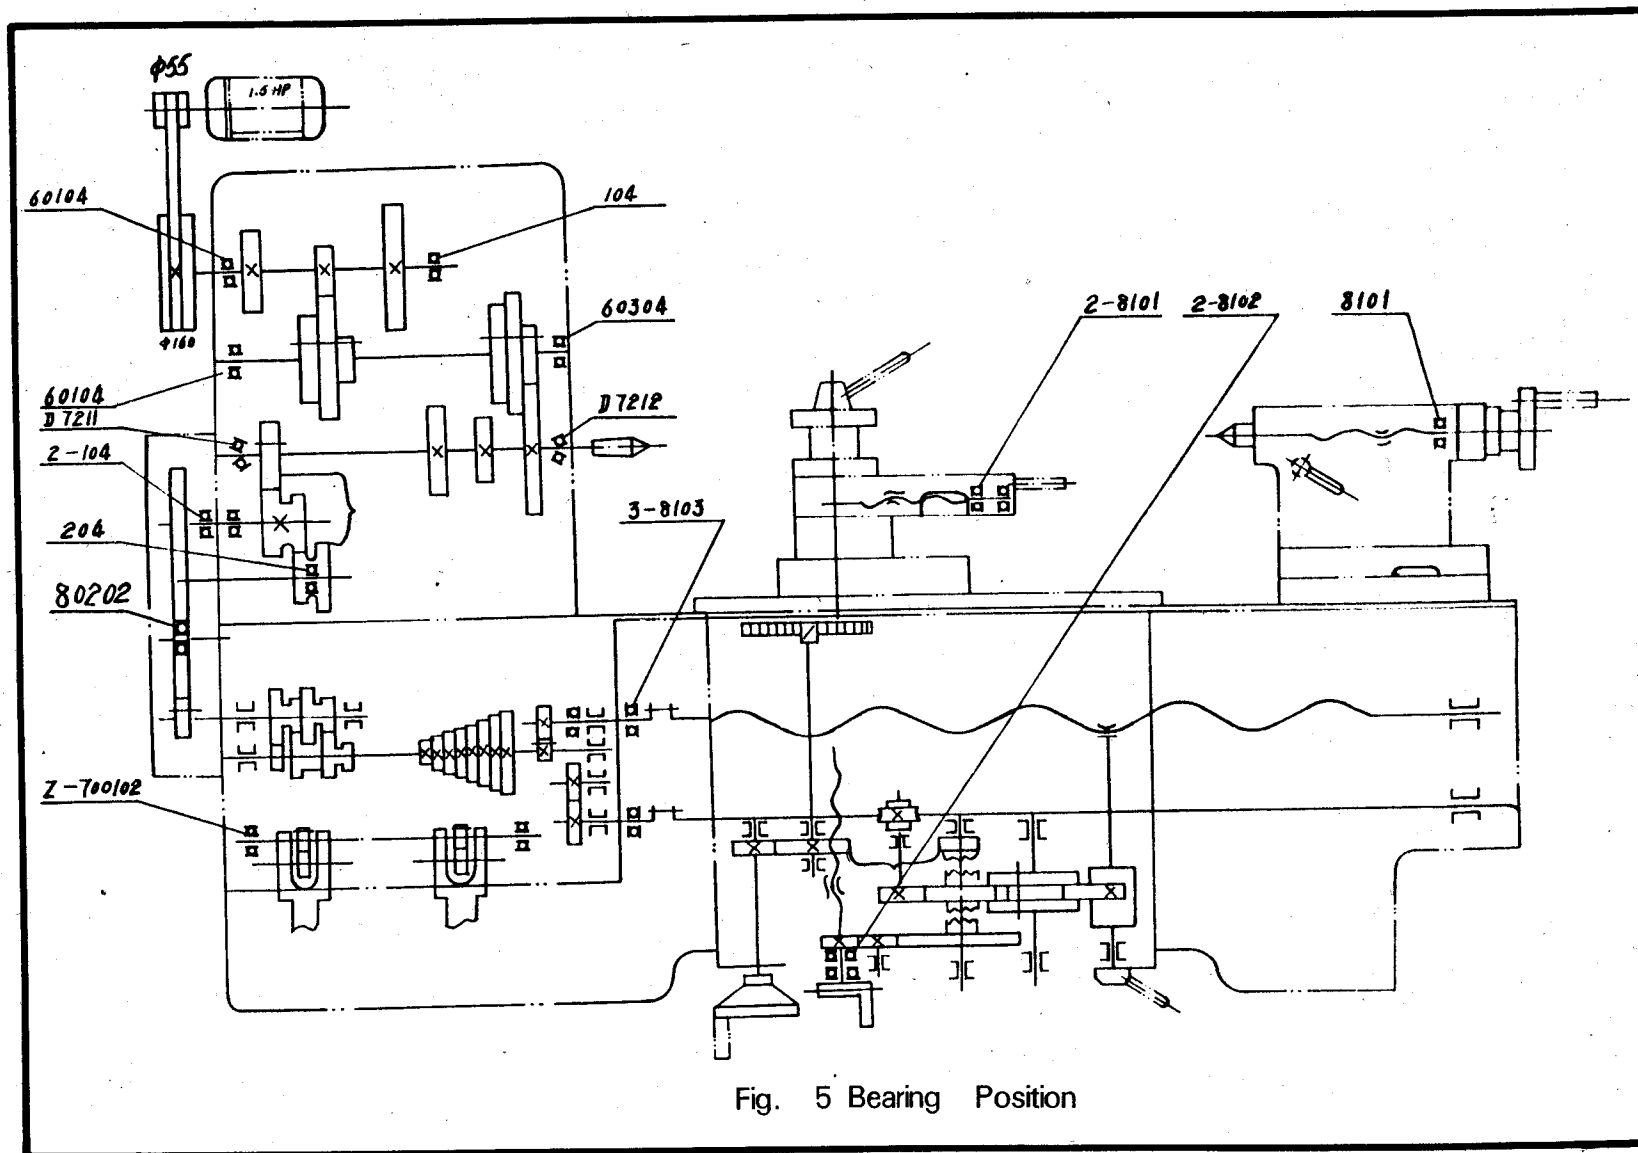

LUBRICATION

- * All moving parts and sliding surfaces should be regularly lubricated with clean lubricating oil. Please refer to Fig. 6 for the lubrication holes.
- * No.1, the cover of headstock, is for headstock lubrication point. Open the cover and fill oil until it reaches the oil-level sight gauge. Running for the first two weeks, or usually for three months, exchange the oil. While exchanging the oil, loosen the oil screw and flow all-out the oil. Then wash the headstock with kerosene etc. and pour clean oil into headstock.
- * No.2 through 11 are lubrication points (see Fig. 6). They are oiled with oil gun twice a day.
- * No.2 is the lubrication point for gear box. No.3 for change gear. No.4 for apron. No.5 (two slanting holes) for gear box. No.6(two points) for carriage sliding. No.7 for handwheel. No.8 (two points) for collar of bracket. No.9 for tailstock. No.10 for tool post slide. No.11 for saddle screw.
- * The other sliding surfaces contain dovetail slot, half nut, worm gear, lead screw, feed rod, handle rod, quill of tailstock etc. They should be oiled before operating and after doing. *Gear Box*
- * Oil recommendations: a. For headstock and feedbox; Mobil D.T.E. light. b. For all other applications; Mobil Vactra No.2. *Wiley-oil*

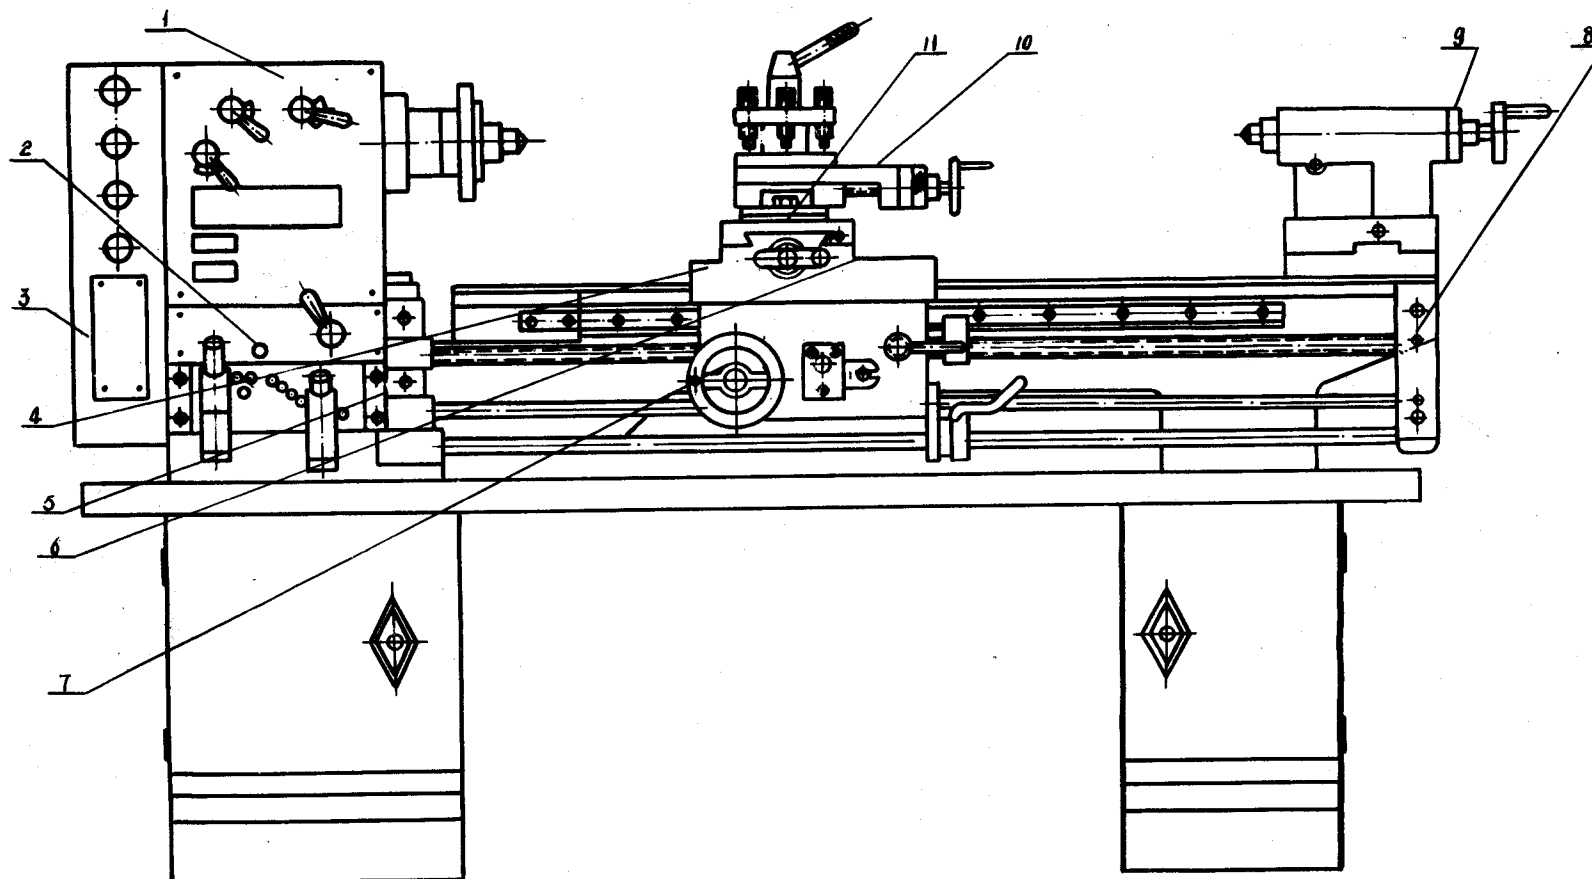


Fig. 6 Lubrication Chart

ELECTRICAL DOCUMENT CATALOGUE

No.	Name	Page
1	electrical document catalogue	14
2	electrical system explanation	14
3	Fig. 7 wiring diagram for 3 phase	15
4	Fig. 8 distributing plate arrangement for 3 phase	16
5	Fig. 9 electrical equipment connection for 3 phase	17
6	Fig.10 wiring diagram for 1 phase (1)	18
7	Fig.11 wiring diagram for 1 phase (2)	19
8	Fig.12 distributing plate arrangement for 1 phase	20
9	Fig.13 electrical equipment connection for 1 phase	21
10	Fig.14 the motor 110v/220v transferring connection diagram for 1 phase	22
11	Fig.15 electrical equipment Arrangement	23
12	electrical element list	24

ELECTRICAL SYSTEM EXPLANATION

- * The standard lathe are wired for 220v/380v 3 phase 60 & 50 Cycle [See Fig. 7] or for 110v/220v 1 phase 60 & 50 cycle (See Fig.10) according to order. For connection to motor (1 phase. 110v/220v). please see Fig.14 transferring connection diagram.

For electrical connections, merely connect your supply lines to the leads provided on the lathe. Before connecting, make sure the motor specification and the machine wiring correspond with power supply and connect 15/30A fuse into power line.

- * Electrical control box is located behind the headstock.
- * Put the cs handle in the middle position and push the "power start" to close the electrical circuit. The cs switch is wired for counter-clockwise spindle rotation in the forward position and clockwise spindle rotation in the reverse position. If not, turn off the power and interchange the leads according to the motor wiring diagram.
- * Putting cs-handle in the middle position can stop the machine. Pushing the knob "reset" will open the circuit.
- * The machine must be connected to ground or ground wire.

	Reverse run	Forward run		Signal	Emergency stop start	Forward run	Reverse run
1	2	3	4	5	6	7	8

- Suggestion**
- 1) Frequency: 50Hz
Phase: 3
Power Volt: 380V
Controlling Volt: 24V
Power: 1.5HP
Wire: 1.5 mm²
 - 2) Frequency: 60 Hz
Phase: 3
Power Volt: 220V
Controlling Volt: 29V
Power: 1.5HP
Wire: 1.5 mm²

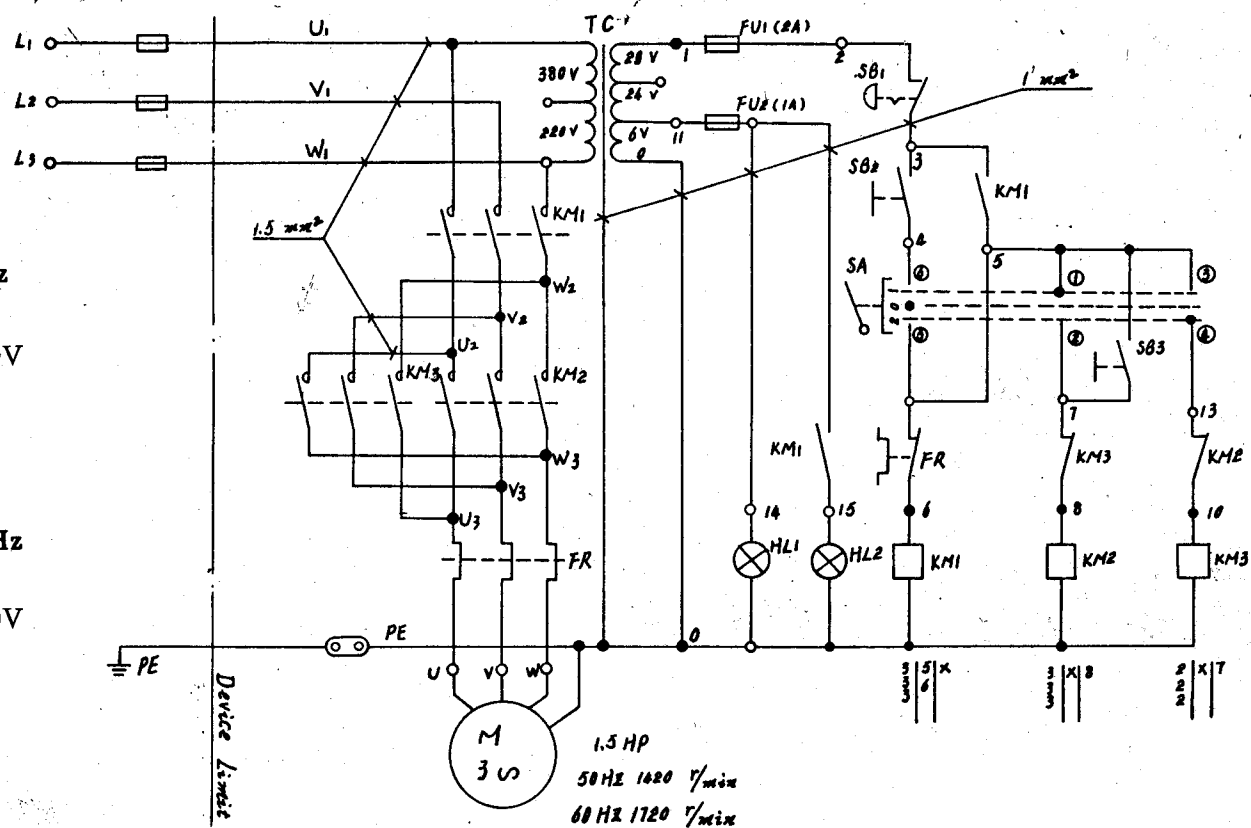


Fig. 7 Wiring Diagram For 3 Phase

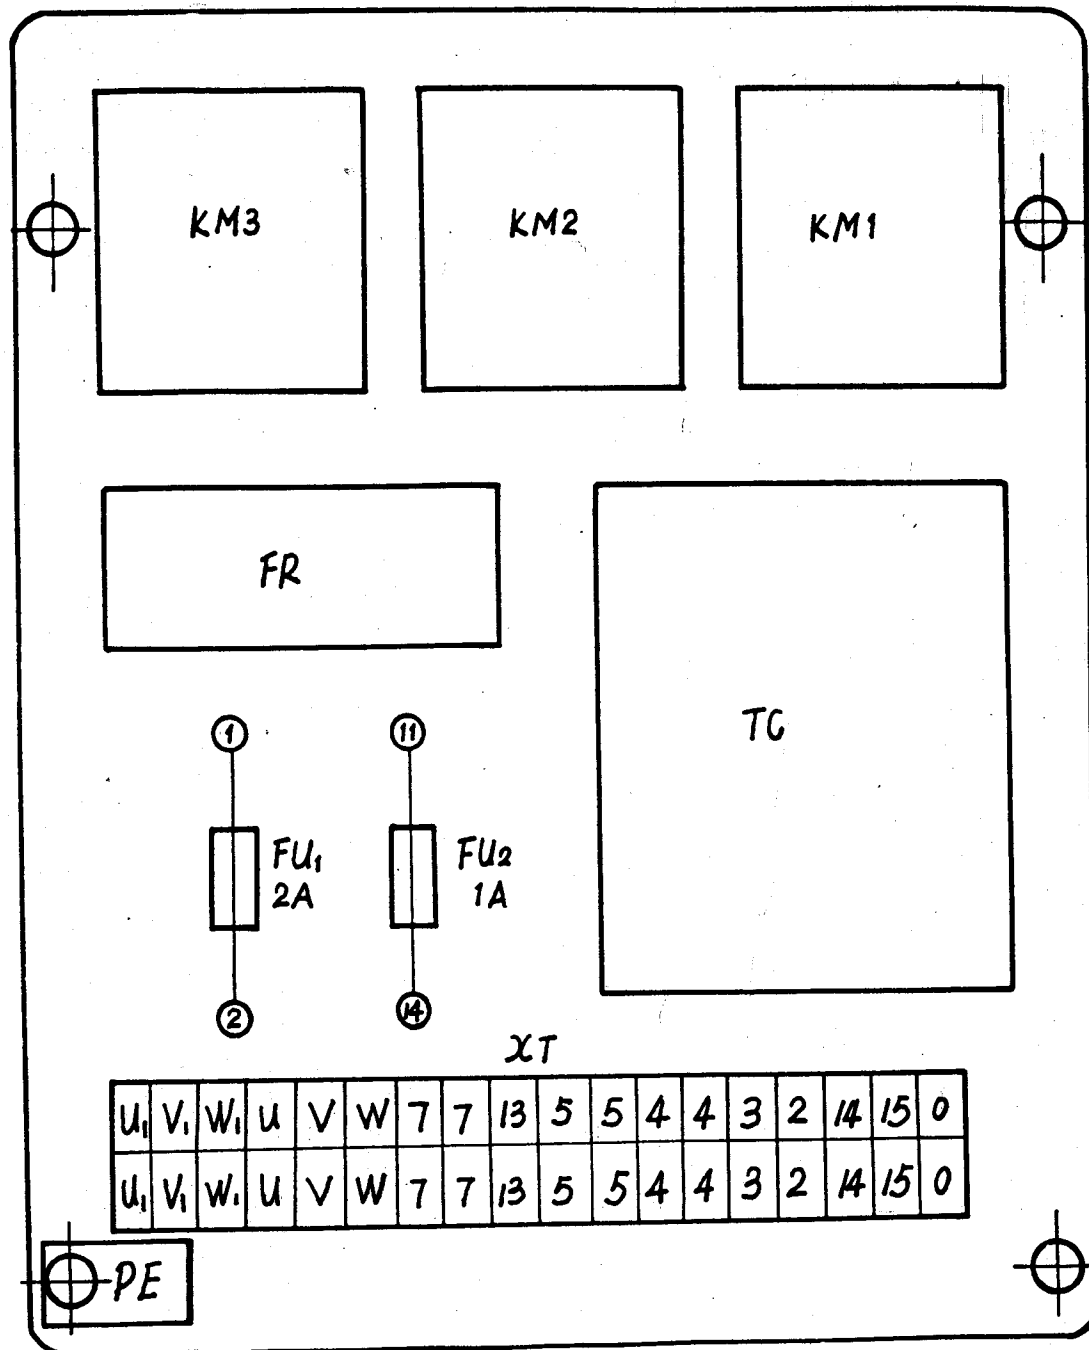


Fig. 8 Distributing Plate Arrangement For 3 Phase

Suggestion:
Frequency: 60Hz
Phase: 1
Power Volt: 110v/220v
Note:
Machine should be wired as diagram 10 when Input voltage is 110v, and it should be wired as diagram 11 when Input voltage is 220v.




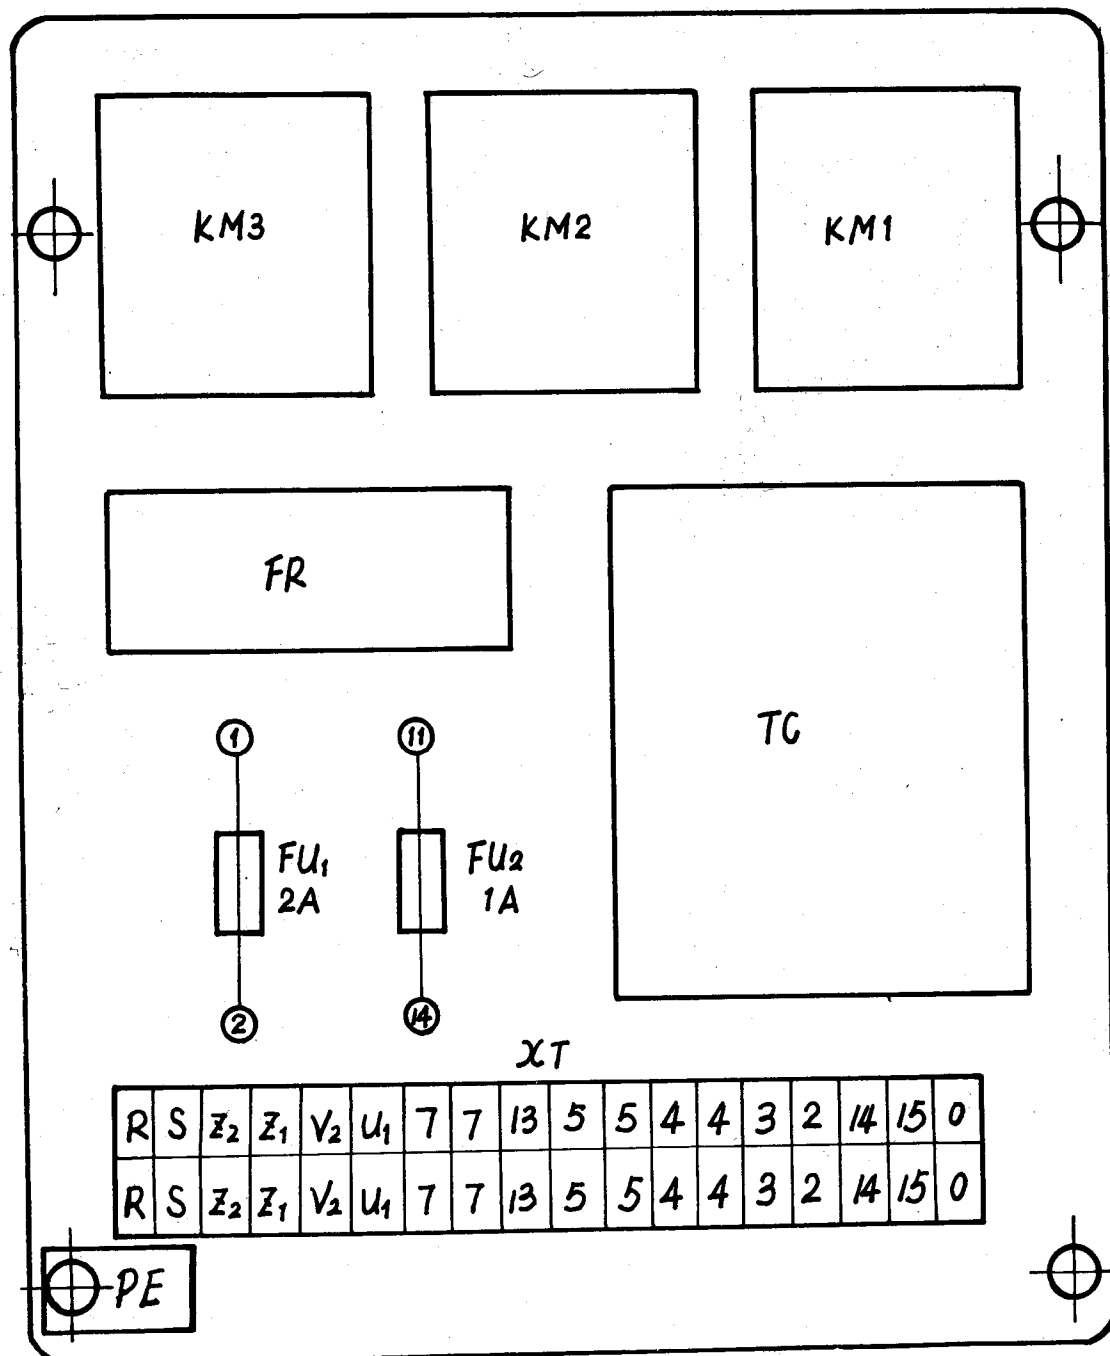


Fig. 12 Distributing Plate Arrangement For 1 Phase

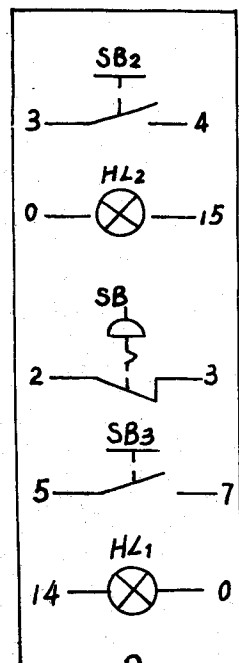

XT

R	S	Z2	Z1	V2	U1	7	7	13	5	5	4	4	3	2	14	15	0
---	---	----	----	----	----	---	---	----	---	---	---	---	---	---	----	----	---

IPH 50Hz 220V

60Hz 110v/220v

Note:(Input voltage:
110v/220v)

Do not pulg in the
wire Z2 when input
voltage is 220V and
connect it when input
voltage is 110V .





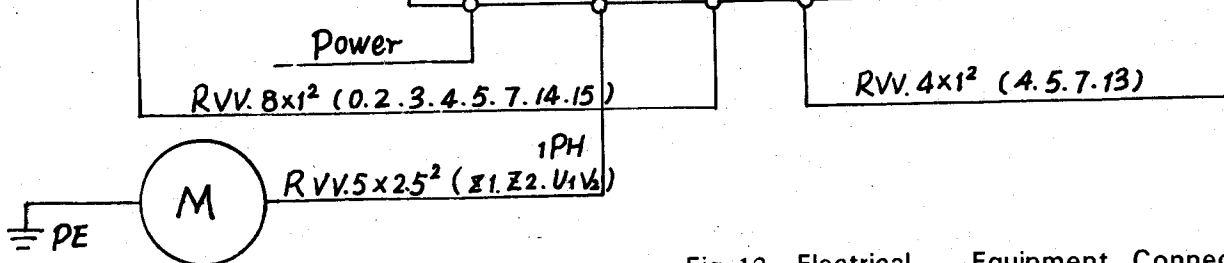



Fig.13 Electrical Equipment Connection For 1 Phase

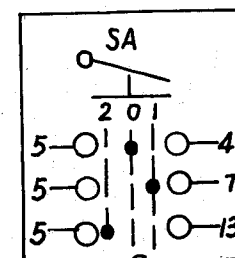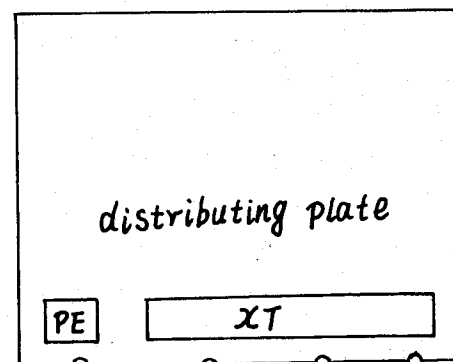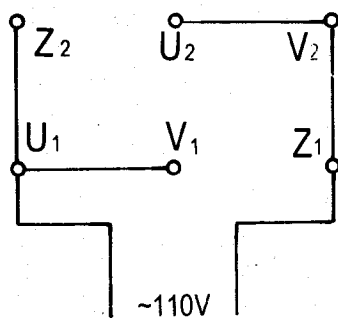


Forward run

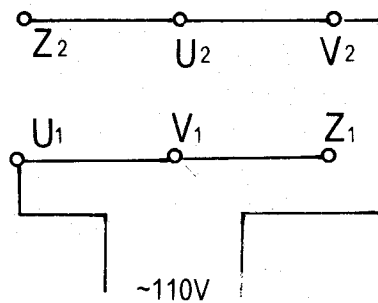

Reverse run

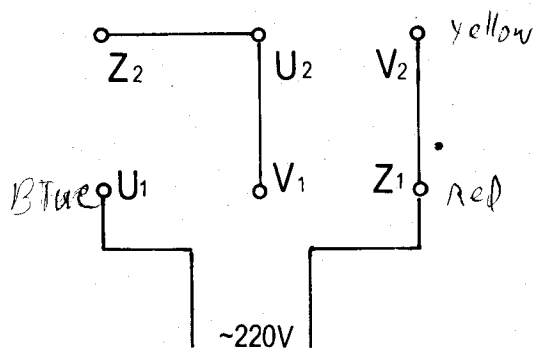

Forward run

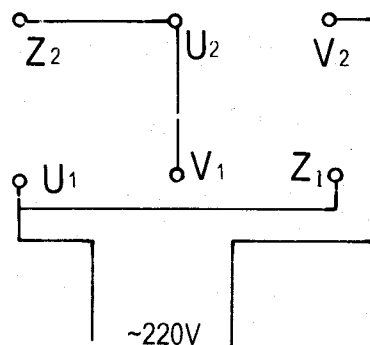

Reverse run


Caution: When 110v transfer to 220v, only

3 wires were connected, Z_1 , U_1 , V_2


not Z_2 ,

Fig.14 The motor 110v/220v Transferring Connection
Diagram For 1 Phase

WIRING FOR LATHE #110-1351 & 2075 110V & 220V 1 PHASE

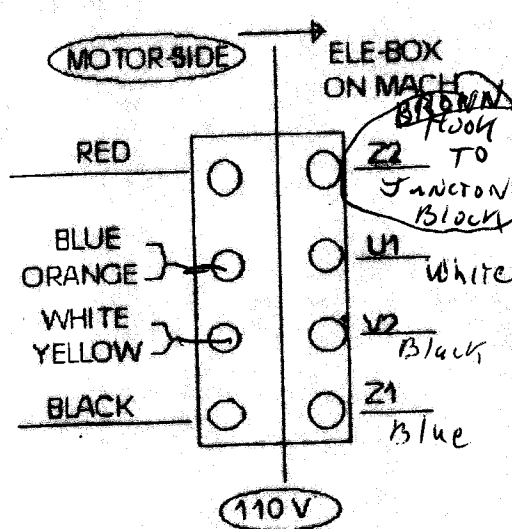



NOTE: YOU MUST CHANGE
INPUT TO TRANSFORMER
TO 110 VOLT TERMINAL

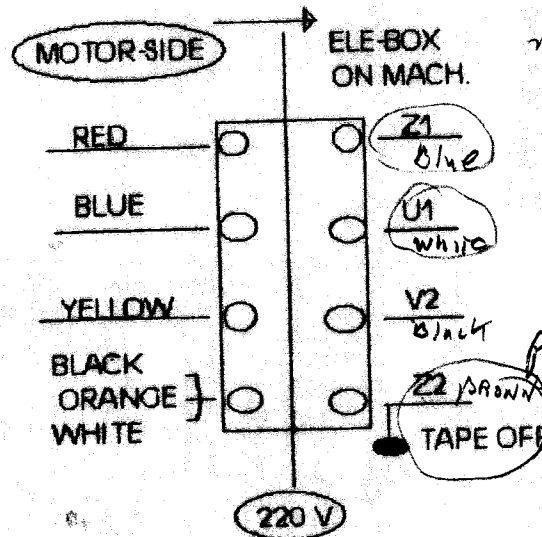

NOTE: SWITCH BLACK & RED
WIRE TO CHANGE MTR
DIRECTION.

*This is the
way the
Lathe Arrived*

*Pull From
Junction Block*

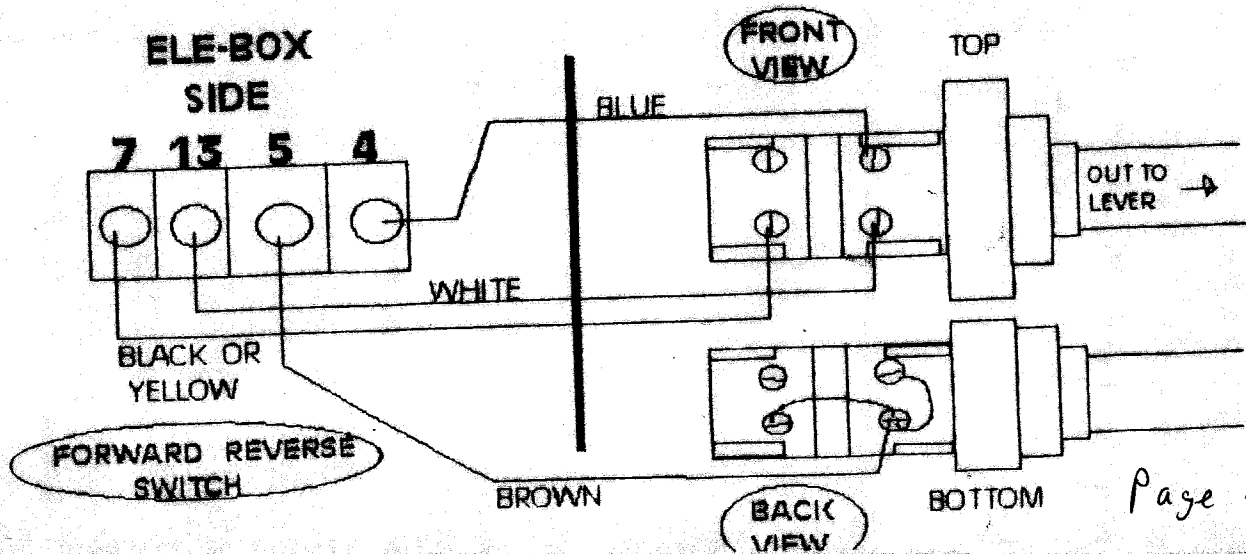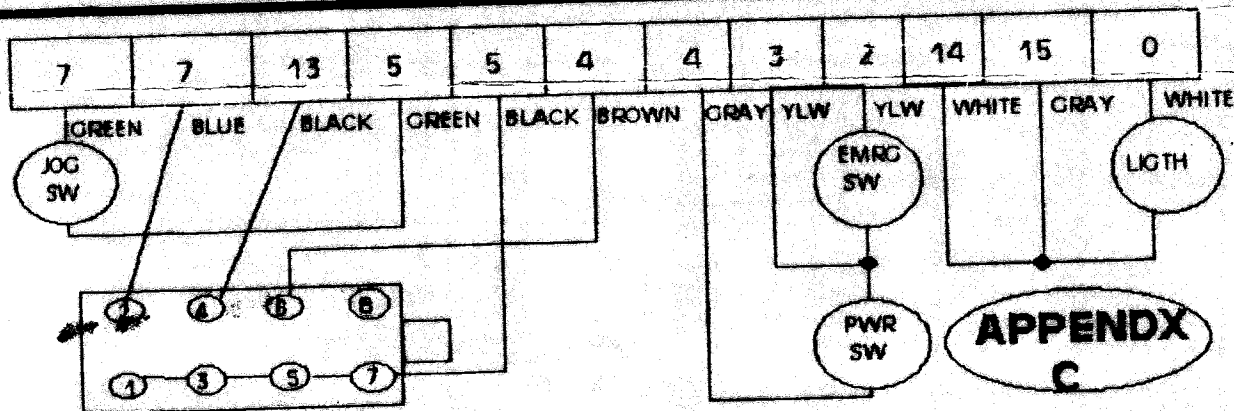


9 ee 067 d

3 CONTACTORS

WIRING DIAGRAM
110-2078 & 110-1352
+
110-2075
+
110-2086

CONTACTORS
USE A COIL
INSIDE THEM
WITH A VOLT RATING
FROM 24V TO 110V

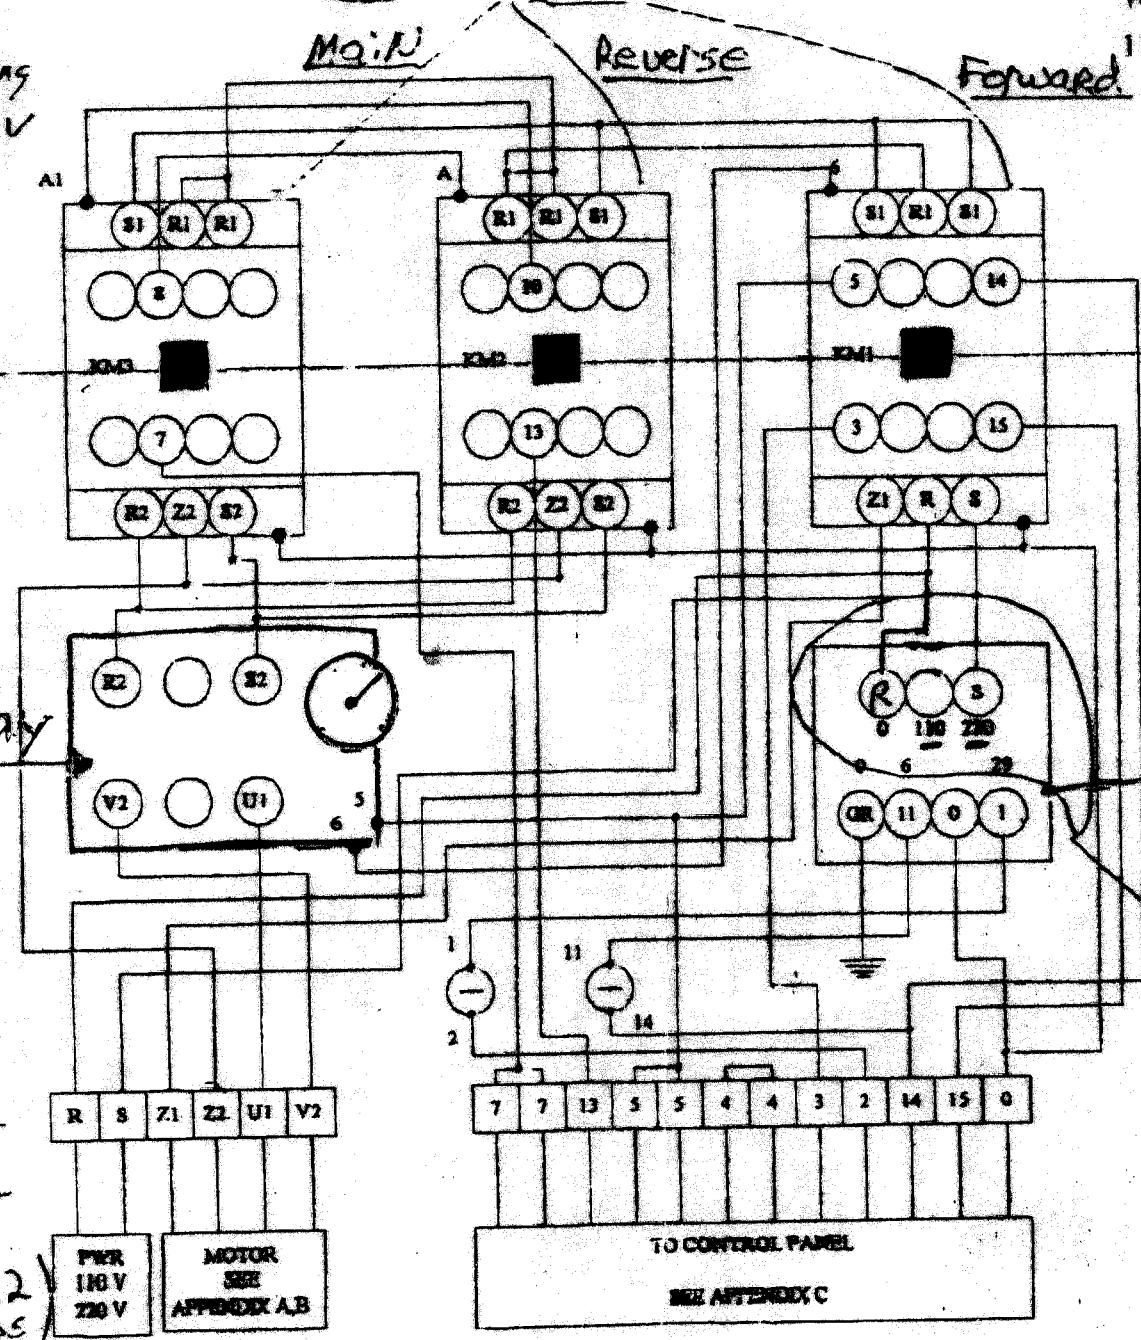

Thermo-Relay

Relay can
BE adjusted
to a MAX
of 29amps
if contactors
are kicking out
machines shut-
off. (Factory
setting is 21-22
amps)

TRANSFORMER
MUST BE
Switch FOR
110V BY
changing wires
From 220V
over to 110V
OR
The other way
220 to 110

PWR
110V
220V

MOTOR
SEE
APPENDIX A.B

TO CONTROL PANEL
SEE APPENDIX C

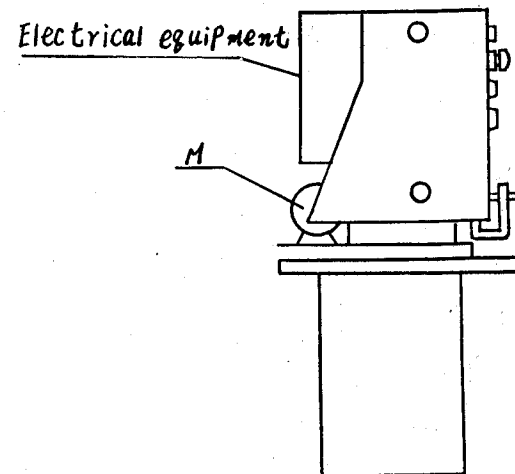
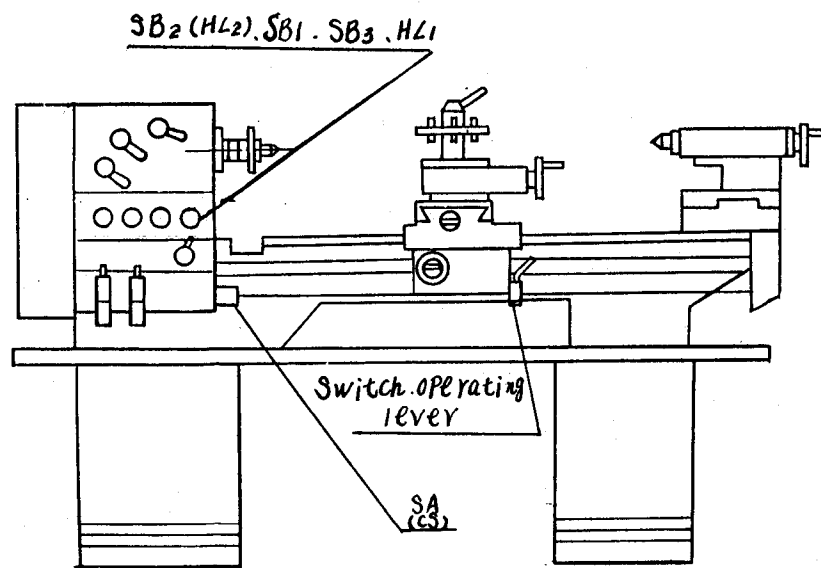


Fig. 15 Electrical Equipment Arrangement

Symbol	Name	Type				Quantity	Note
		Phase 3, 50Hz, 380V	Phase 1, 50Hz, 220V	Phase 3, 60Hz, 220V	Phase 1, 60Hz, 110V/220V		
M	Induction Motor	Y90S-4 1.1 KW 1420r/min	YL90S-4 1.1KW 1420r/min	Y90S-4 1.1KW 1720r/min	YC90L-4 1.1KW 1720r/min	1	
KM1	AC Contactor	3TB41 Control volta 24V	3TB41 Control volta 24V	3TB43 Control volta 29V	3TB43 Control volta 29V	1	
KM2	"	"	"	"	"	1	
KM3	"	"	"	"	"	1	
FR	Heating device relay	JR16B-20/3 3.5A	JR16B-20/3 11A	JR16B-20/3 5A	YJR16B-20/3 22A	1	
TC	Transformer for Contol circuit Supply	BKC-50 Primary: 0-380V Secondary: 0-6V、0-24V	BKC-50 Primary: 0-220V Secondary: 0-6V、0-24V	BKC-50 Primary: 0-220V Secondary: 0-6V、0-29V	BKC-50 Primary: 0-110V-220V Secondary: 0-6V、0-29V	1	
FU1	Fuse	BLF-1 2A	BLF-1 2A	BLF-1 2A	BLF-1 2A	1	
FU2	"	BLF-1 1A	BLF-1 1A	BLF-1 1A	BLF-1 1A	1	
SA (CS)	Selector Switch	HZ5B-10/2 D009	HZ5B-10/2 D009	HZ5B-10/2 D009	HZ5B-10/2 D009	1	
SB1	Reset	LAY3-01 ZS/1	LAY3-01 ZS/1	LAY3-01 ZS/1	LAY3-01 ZS/1	1	
SB2	Power start	LA19-11D Green	LA19-11D Green	LA19-11D Green	LA19-11D Green	1	Voltage for Lamp 6.3 V
SB3	Inching	LA19-11 Black	LA19-11 Black	LA19-11 Black	LA19-11 Black	1	
HL	Indicator lamp	XD-1 White	XD-1 White	XD-1 White	XD-1 White	1	Voltage for Lamp 6.3 V

Electrical Element List

TRIAL DRIVE, ADJUSTING AND OPERATING INSTRUCTION

1. Before operating the machine, read this operating instruction and understand it's requirement of adjusting, operating, maintenance and lubrication etc.
2. The machine is equipped with 1 or 2 V-belts from the motor to the low rear pulley. It is advisable to check the tension before starting the machine. The belts should be depressed about 1/2 inch by normal finger pressure. Tight belt will ruin the bearing. Adjust the tension, if necessary.
3. When trial driving, set changing lever on the Lowest speed and let the machine operate for 20 minutes. If functioning normally, increase the spindle speed step by step until the highest speed (then the feed lever in the middle rate) each step operating for over 5 minutes.

Caution: Speed changing can be made when motor is completely stopped.

4. Machine Operating Lever. See Fig.16

Headstock

- * With the help of lever (1), (2) and v-belts the headstock can provide 18 or 9 step speeds from 50 to 1500 r.p.m as shown in "spindle speed chart" located on the front side of headstock (see Fig. 17)
- * Starting & stopping of spindle can be made merely by the starting lever(11). Moving the lever (11) up, the spindle will be counter - clockwise rotation; starting lever(11) down, the spindle will be reverse rotation.

Quick Change Gear Box

- * Lever (4) is a selecting lever of threading or feed. Left position is for feed shaft. Center position is neutral. Right position is for lead screw.
- * Lever (5) & (6) can control the feed gear box. Lever (5) has five positions. Lever (6) has eight positions. Moving the two tumbler levers can provide all kinds of feed rates positioned on left side of headstock (See Fig. 18) and inch thread pitches positioned on the front of gear box (See Fig.19) with the help of metric change gears, the two tumbler lever can also provide metric threads in the "change gear chart for m/m size" located on the front side of headstock. (See Fig.20)

Caution. Always stop the spindle before engaging any of above 3 levers.

Carriage Assembly

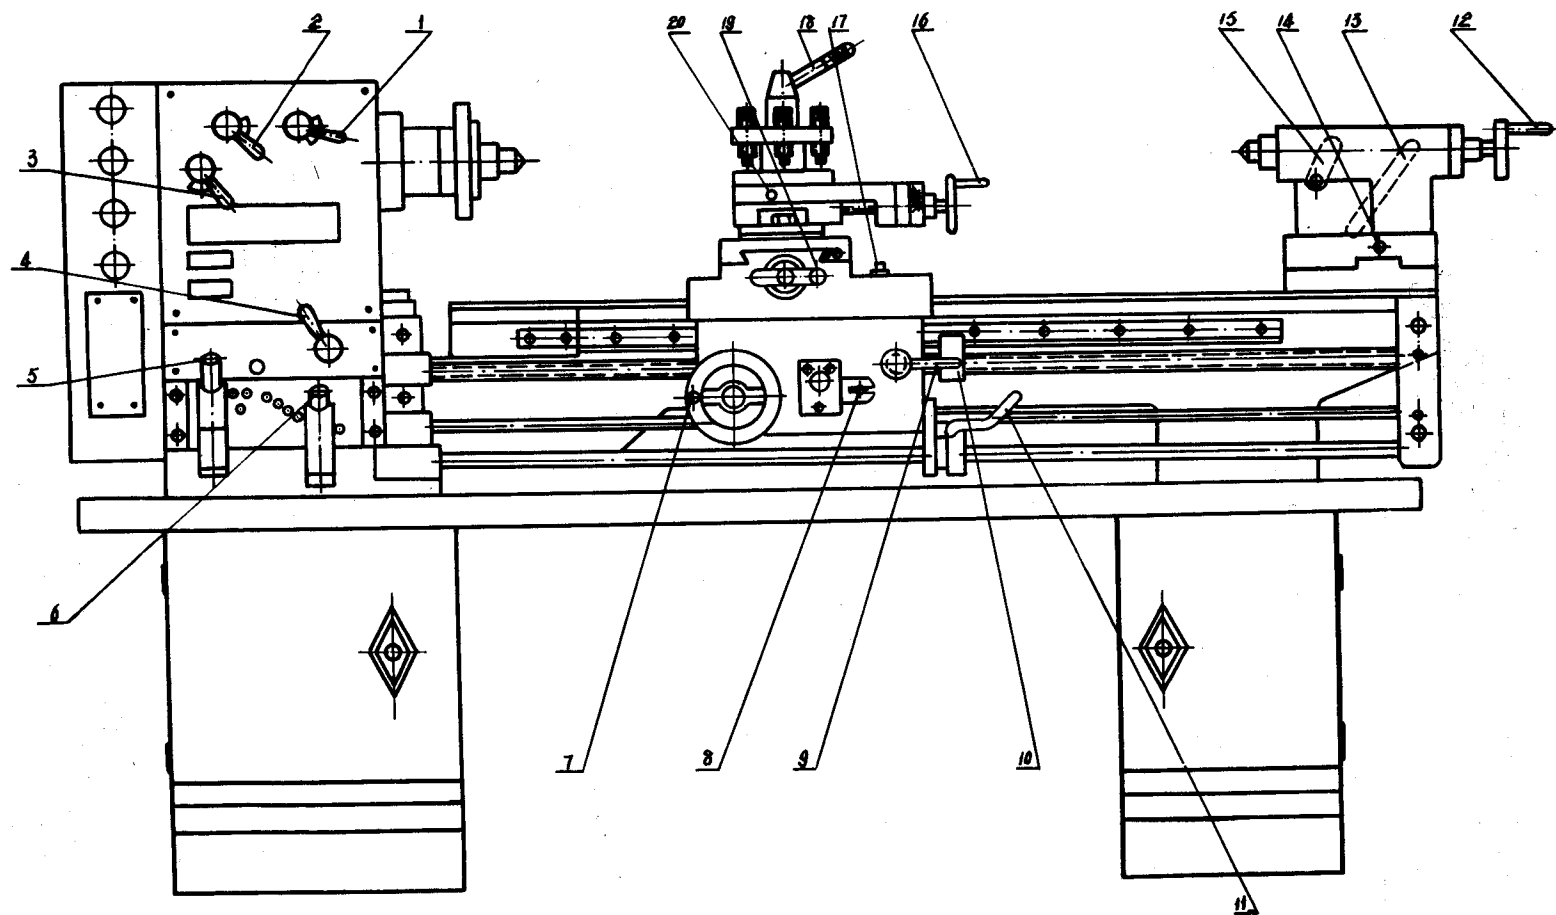


Fig. 16 Machine Operating Levers

List 1: 9 step spindle speed

		Spindle speed chart			
			1	2	3
A	60Hz	270	1400	800	
	50Hz	250	1500	850	
B	60Hz	75	360	220	
	50Hz	50	325	200	
C	60Hz	200	1000	600	
	50Hz	150	950	540	

List 2: 18 step spindle speed

		Spindle speed chart					
60Hz		I			II		
		1	2	3	1	2	3
A		320	1550	950	220	1150	700
B		90	430	260	60	300	200
C		240	1200	725	180	890	525

Fig. 17 Spindle Speed Chart

mm C.T.									
position		1	2	3	4	5	6	7	8
A	~	0.791	0.703	0.666	0.632	0.575	0.527	0.486	0.452
	}	0.268	0.238	0.226	0.214	0.196	0.178	0.166	0.154
B	~	0.395	0.351	0.333	0.316	0.287	0.264	0.243	0.226
	}	0.134	0.119	0.113	0.107	0.098	0.089	0.083	0.077
C	~	0.198	0.175	0.167	0.158	0.144	0.132	0.122	0.113
	}	0.067	0.060	0.057	0.054	0.049	0.045	0.042	0.038
D	~	0.099	0.088	0.085	0.079	0.072	0.066	0.061	0.057
	}	0.033	0.030	0.028	0.027	0.025	0.022	0.021	0.019
E	~	0.050	0.044	0.042	0.040	0.036	0.033	0.031	0.028
	}	0.017	0.015	0.014	0.014	0.012	0.011	0.011	0.010
inch									
position		1	2	3	4	5	6	7	8
A	~	0.0311	0.0277	0.0262	0.0249	0.0226	0.0207	0.0191	0.0178
	}	0.0105	0.0094	0.0089	0.0084	0.0077	0.0070	0.0065	0.0061
B	~	0.0156	0.0138	0.0131	0.0124	0.0113	0.0104	0.0096	0.0089
	}	0.0053	0.0047	0.0044	0.0042	0.0039	0.0035	0.0032	0.0030
C	~	0.0078	0.0069	0.0066	0.0062	0.0057	0.0053	0.0048	0.0044
	}	0.0026	0.0024	0.0022	0.0021	0.0019	0.0018	0.0017	0.0015
D	~	0.0039	0.0035	0.0033	0.0031	0.0028	0.0026	0.0024	0.0022
	}	0.0013	0.0012	0.0011	0.0011	0.0010	0.0009	0.0008	0.0007
E	~	0.0020	0.0017	0.0017	0.0016	0.0014	0.0013	0.0012	0.0011
	}	0.0007	0.0006	0.0006	0.0016	0.0005	0.0004	0.0004	0.0004

Fig.18 Feed Rate list

A vertical bolt is shown with three distinct sections. The top section is labeled '40T', the middle section is labeled '80T', and the bottom section is labeled '40T'. The bolt is represented by a central vertical line with horizontal caps at the ends of each section.

A diagram titled 'POSITION' shows five columns labeled A, B, C, D, and E. Each column contains a circle representing a thread engagement point. Below each circle is an arrow indicating the direction of engagement: A (up), B (down), C (up), D (down), and E (up).

THREADS PER INCH								
	1	2	3	4	5	6	7	8
A	4	4½	4¾	5	5½	6	6½	7
B	8	9	9½	10	11	12	13	14
C	16	18	19	20	22	24	26	28
D	32	36	38	40	44	48	52	56
E	64	72	76	80	88	96	104	112

Fig.19 Inch Thread Pitch list

CHANGE GEAR CHART FOR ^{mm} SIZE										
F	COMBINATION OF GEARS			POSITION	PITCH mm					
	F		G		1	2	3	4	5	6
25		60	A							
			B		1.2					
			C		0.6					
			D		0.3					
			E							
26		60	A					2.0		
			B					1.0	0.9	
			C	0.7				0.5	0.45	
			D	0.35				0.25		
			E							
43		60	A	4.5	4				3.0	
			B	2.25					1.5	
			C	1.125					0.75	
			D							
			E							
46		60	A					3.5		
			B					1.75		
			C					0.875	0.8	
			D						0.4	
			E						0.2	
47		60	A							
			B	2.5	2.2					
			C	1.25	1.1					
			D		0.55					
			E							

Fig. 20 Metric Thread Pitch list

- * Handwheel (7) is used for manually moving the carriage along the bedway.
- * crossfeed crank (19) is used to manually move the cross slide in or out.
- * Compound slide crank (16) is used to manually move the tool post. The compound is fully adjustable to any angle and is also used for threading or machining an angle on the workpiece.
- * Starting/stopping lever (11) is used to control the spindle direction of rotating, either forward or reverse.
- * Thread lever (9) is used to engage the half nuts when threading.
- * Feed lever (8) is used to engage either the longitudinal or cross feed. This lever has a safety interlock to prevent accidental engagement of the half nuts when the lathe is in feed mode. There are three positions: Center or disengaged position. Upper position engages the power longitudinal feed. Lower position engages the power cross feed.
- * The lead/feed lever (3) is used to change the direction of either longitudinal or cross feed in remaining the same spindle rotation.
- * Thread cutting dial (10) is used to engage the half nuts with the leadscrew in the same thread that has been previously cut. Please note, Use any line of the dial for even pitches of threads; but you must use the same starting line for odd pitches of threads. i.e. when cutting a shaft with 10 T.P.I., engage the half nuts at any number on the thread dial; when cutting an odd pitches, if you start the cut using a 1 or a 3, continue to use the 1 or the 3 until the thread is finished.
- * The clamp lever (18) is used to secured tool post against loosing. Loosing the Lever, the tool post can rotate counter-clockwise to change cutting tools.
- * Saddle lock screw (17) is used to firmly clamp saddle to bed way.
- * Compound slide screw (20) is used to clamp compound silde to saddle.

Tailstock

- * The handwheel (12) is used to feed or retreat the quill. Turning the handwheel in counter-clockwise until a full stop is reached will automatically eject the tool being used.
 - * The tailstock clamp lever (13) locks the tailstock to the bedway. To lock, put the lever up. To release, put it down.
 - * The quill lock lever (15) prevent the quill from moving. Before operating the handwheel (12), release the lever. Feeding the quill to desired position, lock it.
 - * Two set screws (14) on either side of the base is used to offset the tailstock. After taper adjustment is made, retighten both screws
5. See the Fig. 21 Adjust the clearance of cross feed nuts on the saddle as following.

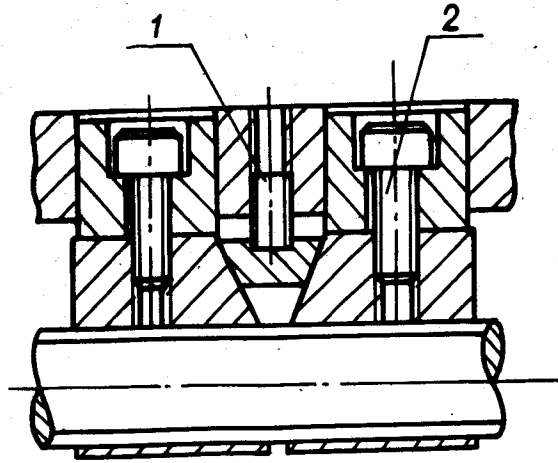


Fig.21 Adjust the clearance of cross feed nuts

Loose 2-M6 screw (2) then rotate the screw (1) down until the slide moves with a slight drag. Last, retighten the 2-M6 screws.

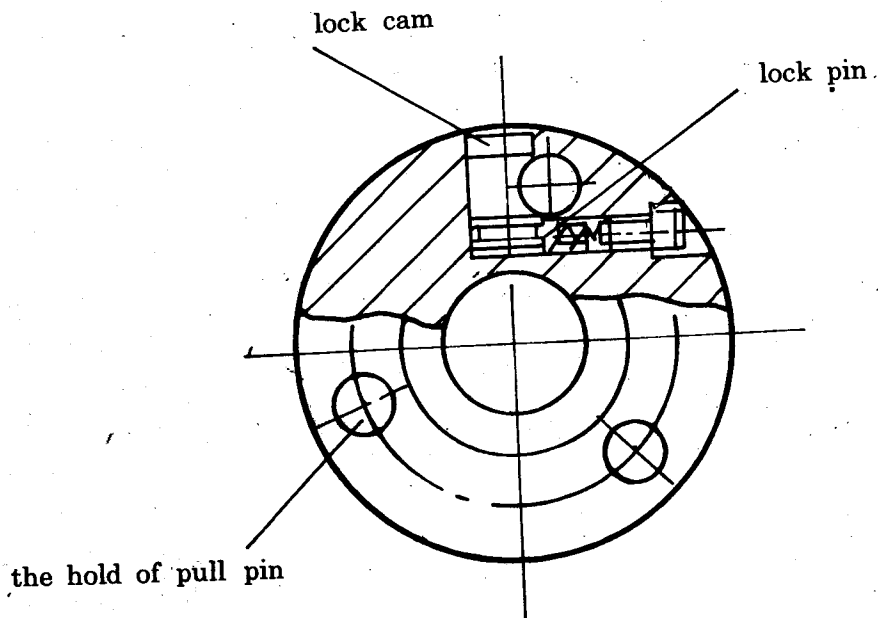


Fig.22 chuck or face plate lock structure

6. See the Fig.22 , the Mounting and detaching of chuck or face plate. The connection between spindle and chuck or face plate is made by type D cam lock structure according to china national Standard GB5900.3-86(similar to

ISO702 /II-1975)

When mounting, put the three pull pin of chuck or face plate into the three holes (See Fig. 22) on the spindle face end. Then turn the three cams (See, Fig. 22) with the help of square head wrench when turning the cams clockwise the chuck or face plate will be locked. When turning the cams counter-clockwise to certain point, the chuck or face plate can be detached.


LATHE MAINTENANCE

1. Before operating the machine, check the oil level and lubricate all sliding and rotating parts according to "Lubricate Chart" (Fig. 6)
2. Always clean every sliding surfaces to prevent the chips. Often check the felt element on each end of the saddle. If being damaged, wash or change it. After operating, clean every parts of the machine and oil each slide surfaces, leadscrew, feed rod etc. to avoid rusting.
3. Periodically wash headstock, gear box, apron and change oil.
4. Keep oil from falling on the motor and v-belt. Periodically check and adjust v-belt.
5. Don't change every gear levers when the spindle is running to prevent damaging gears. If unable to change, you can turn the spindle with hand.
6. When changing spindle rotating direction, it can be accomplished with the help of forward and reverse rotation of motor. It is necessary first to stop spindle. Don't directly change the motor rotating direction before spindle stopped.
7. When using steady rest or follower rest, frequently oil the touching positions between slide pieces and workpiece.
8. Protect the spindle nose, short taper, taper bore of spindle from roughing and impacting on the working accuracy.
9. Finding the machine damaged, repair it immediately.

DAMAGEABLE PARTS


No.	Name	Material	Q'ty	Notes
1	Cross feed nuts	ZQ Sn6-6-3	2	5008
2	Half nut	ZQ Sn6-6-3	1	4024

the rest 12.5/▽

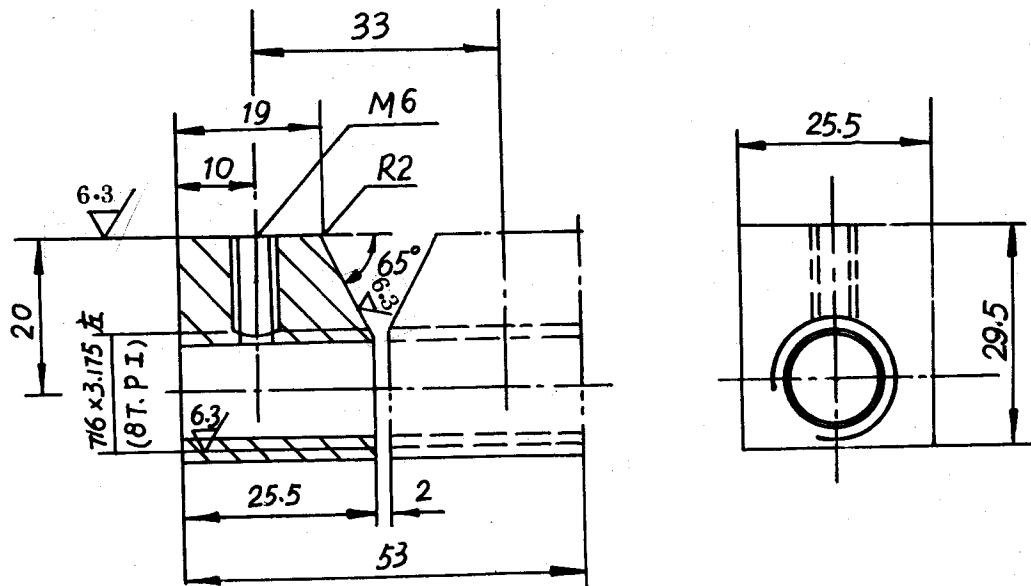


Appendix Fig. 1 Cross feed nuts
Material ZQSn 6-6-3

the rest 12.5

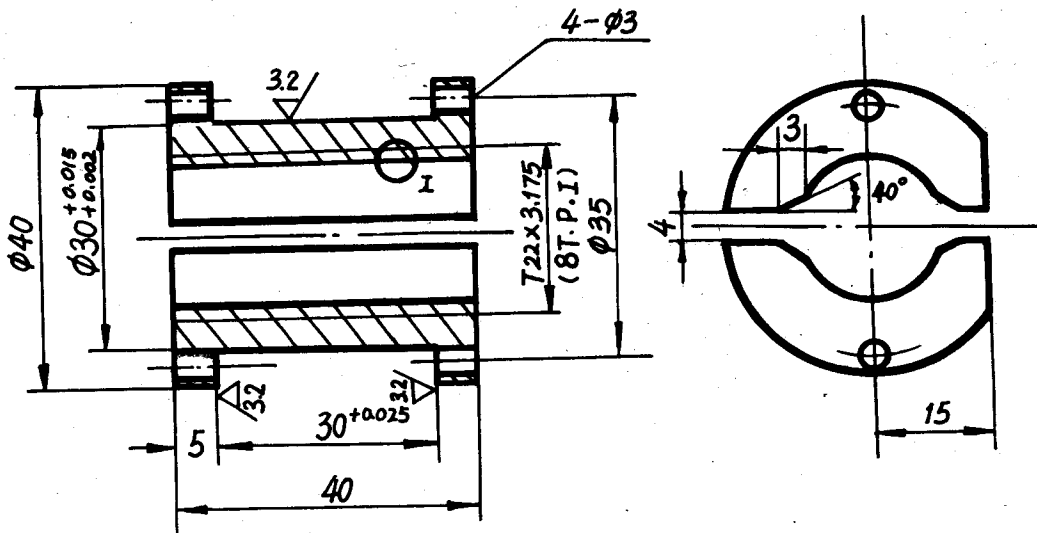

$\frac{I}{M4:1}$

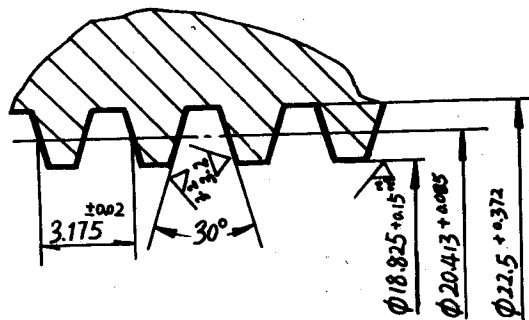

Appendix Fig.2 half nut Material ZQsr6-6-3