


Section 4 PARTS

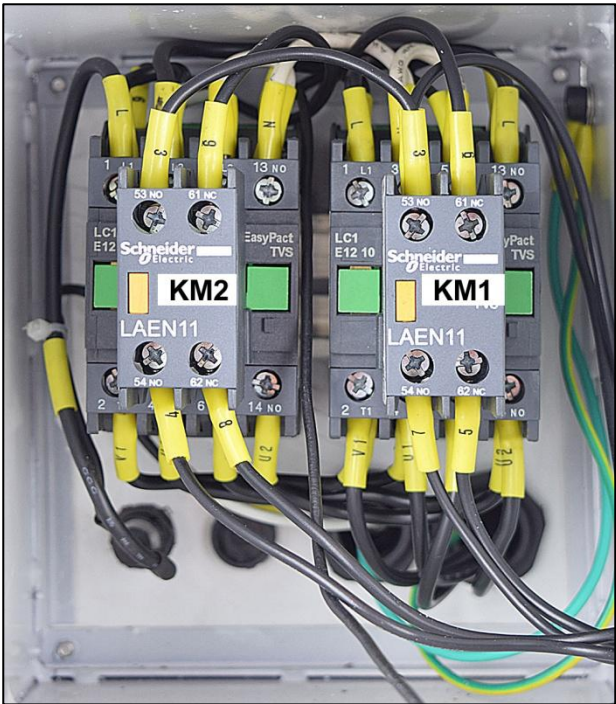

Motor controls

Power Press once to energize, press again to de-energize.

Left = Spindle Forward = clockwise looking down on mill table

Right = Spindle Reverse = counter-clockwise

Off = Stop motor

E-Stop Emergency disconnect (stays in until turned to release)

